




T4 is the 2.4GHz RF wireless sync/zone RGBW controller which adopts 4 global initiate technology. It has powerful function that general RF remote control can't realize, especially in wireless connection between receivers to realize sync dynamic change effect. It is very convenient in installation for users.


ITEM CODE	T4 - CV (Receiver)
VOLTAGE	5-24V
CURRENT LOAD	5A - 4CH (max 20A)
POWER OUTPUT	5v-100w 12v-240w 24v - 480
WIRELESS SIGNAL	RF 2.4GHz
OPERATING TEMP.	-30°C ~ +55°C

ITEM CODE	T4 Remote
BATTERY	5vDC (built-in lithium rechargeable)
BATT CAPACITY	1000mAh
CURRENT	-30mA
RF DISTANCE	30m
WIRELESS SIGNAL	RF 2.4GHz

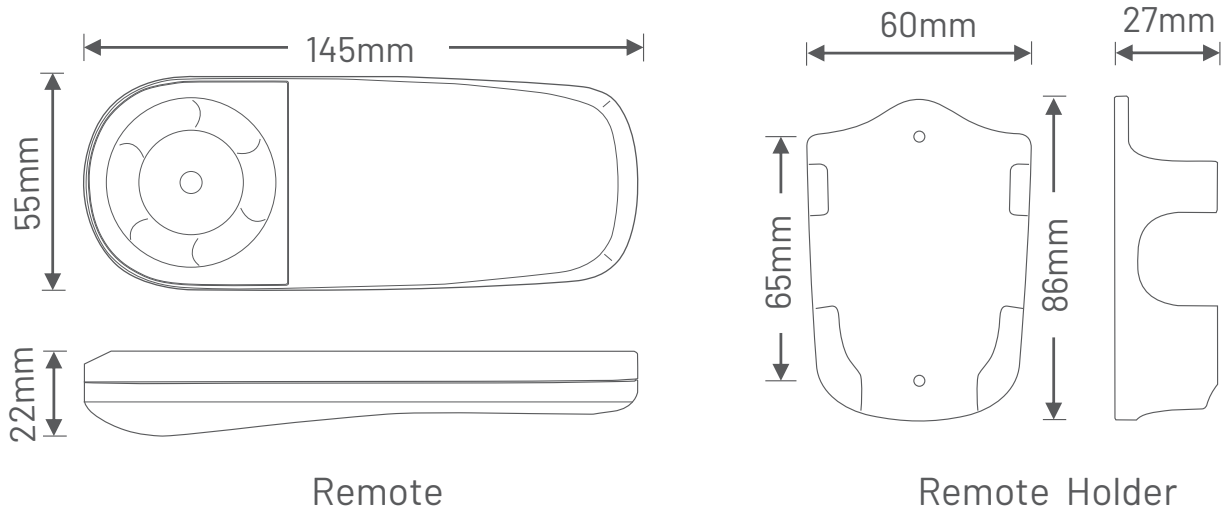

Remote

Remote Holder

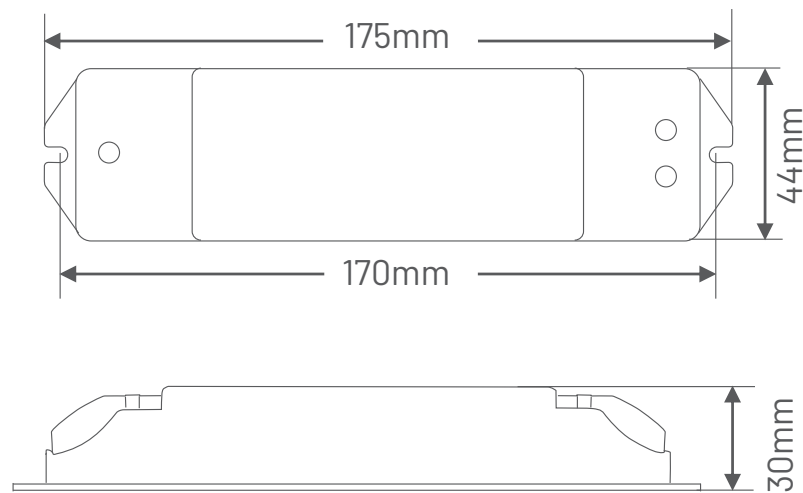


 
Receiver

Notice for the Remote Charging:


- A. When charging, please connect USB cable to the mobile charger or computer.
- B. The blue indicator light flickers while charging, and turns green means the charging is completed. The remote can be chargeable even at off state, which the indicator light is dark.
- C. No memory effect in the lithium battery of remote. Follow the standard charging procedure even for the first 3 times, no need over charge.
- D. Red indicator light flickers meaning low battery and need to be charged. Charging in low battery will affect the life of battery.
- E. the remote should be full charged and stored at a ventilated and dry place when long time no use, and please full recharge every 3 months.

The Learning ID Method:

Learning ID:


1. Turn on the receiver and remote.
2. Short press "ID learning button"  on the receiver, the running light keeps on, then long press "1-8" zone-selection keys on the remote, the running light returns to flash (the buzzer long beep, the green light  flashes 3 times), activated.

Cancelling ID:

Press "ID learning button"  on the receiver more than 8 seconds, the buzzer beep twice, delete all the learned remote.


* Sync Control: 1 remote to unlimited receivers. Zone Control: 1 remote to Max 8 receivers (1 receiver per zone).

Receiver Components Description:

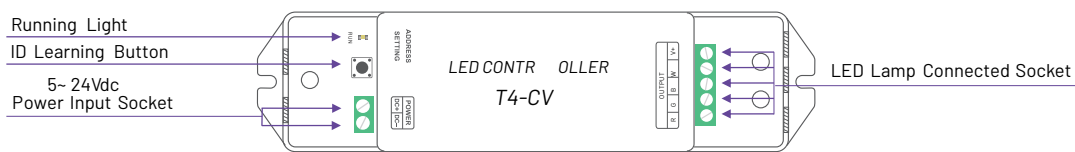

Remote Instructions:

Built-in two control programs, it is convenient for user's different habits and place, free switching the two programs.

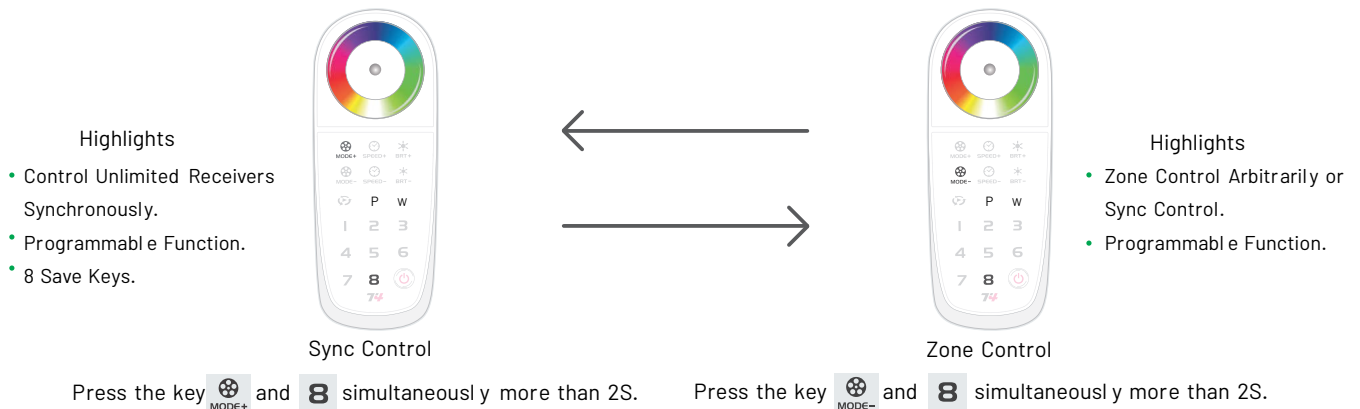


* Power Saving: Unmanned operation more than 1 minute on the remote, the remote will off automatically to realize zero loss, extending operation life. Press "ON/OFF" to restart the remote.


Mode Keys   : Switch black/red/green/blue/yellow/purple/cyan/white/RGB/RBG YPCW.

Open the Buzzer: Long press  Close the Buzzer: Long press 

A. Sync Program:

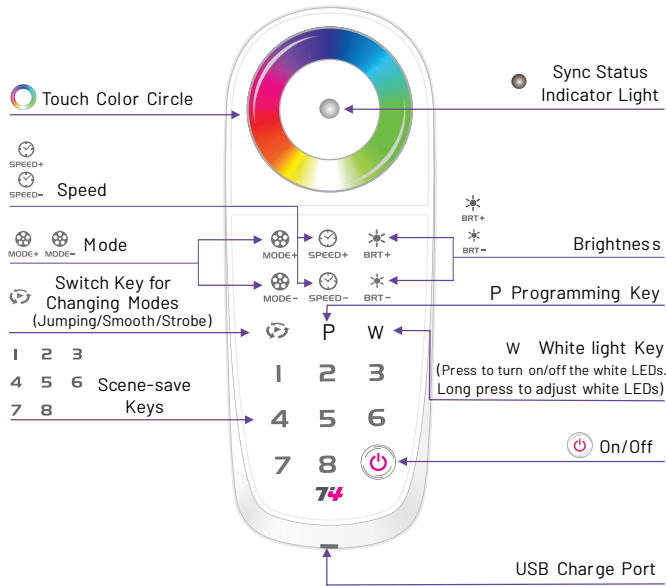

B. Zone Program:

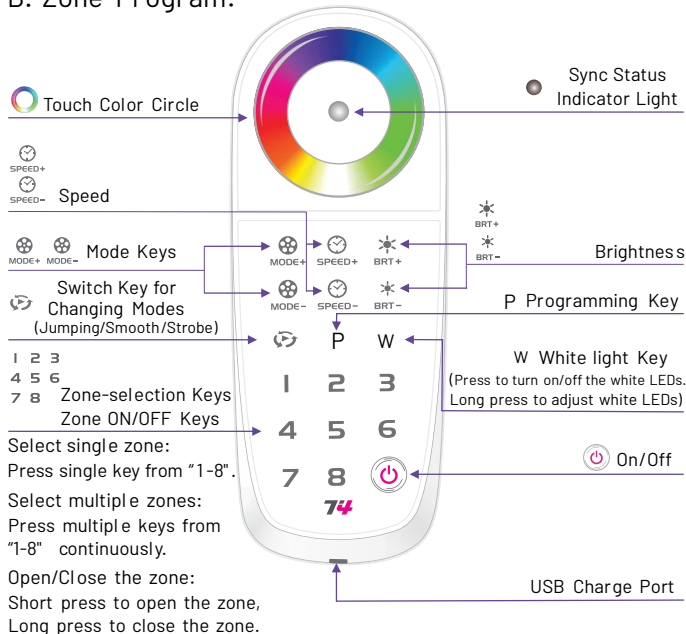

The Usage of The Programming "P" :

- 1) Long press the key **P** in 2 seconds, the buzzer long beep, means enter the programming mode.
- 2) Color selection: Short press a key from "1-8" in order, then press "MODE" key or "touch color circle" to select the color. (color will be saved in this key automatically, max 8 colors)

Example 1:

1	2	3	4	5	6	7	8
Red	Green	Blue	Yellow	Purple	Cyan	White	Black

R G B Y P C W 7 Colors' Jumping/Smooth/Strobe

Example 2:

1	2	3	4	5	6	7	8
Red	Blue	Black	Black	Black	Black	Black	Black

R B 2 Colors' Jumping/Smooth/Strobe

Example 3:

1	2	3	4	5	6	7	8
Red	Black	Green	Black	Blue	Black	Black	Black

R BK G BK B 5 Colors' Jumping/Smooth/Strobe

Example 4:

1	2	3	4	5	6	7	8
Black	Red	Black	Green	Black	Blue	Black	Black

R G B 3 Colors' Fade out and Fade in
BK R BK G BK B 6 Colors' Jumping/Strobe

Note: Select black color with keys **MODE+** **MODE-**

- 3) Short press the key **P** to exit color selection.
- 4) Press **MODE+** to switch the selected colors' Jumping, smooth and strobe (brightness/speed adjustment).
- 5) Long press any key from "1-8" to save the edited scene.

The Usage of The Programming "P" :

- 1) Long press the key **P** in 2 seconds, the buzzer long beep, means enter the programming mode.
- 2) Color selection: Short press a key from "1-8" in order, then press "MODE" key or "touch color circle" to select the color. (color will be saved in this key automatically, max 8 colors)

Example 1:

1	2	3	4	5	6	7	8
Red	Green	Blue	Yellow	Purple	Cyan	White	Black

R G B Y P C W 7 Colors' Jumping/Smooth/Strobe

Example 2:

1	2	3	4	5	6	7	8
Red	Blue	Black	Black	Black	Black	Black	Black

R B 2 Colors' Jumping/Smooth/Strobe

Example 3:

1	2	3	4	5	6	7	8
Red	Black	Green	Black	Blue	Black	Black	Black

R BK G BK B 5 Colors' Jumping/Smooth/Strobe

Example 4:




1	2	3	4	5	6	7	8
Black	Red	Black	Green	Black	Blue	Black	Black

R G B 3 Colors' Fade out and Fade in
BK R BK G BK B 6 Colors' Jumping/Strobe


Note: Select black color with keys **MODE+** **MODE-**

- 3) Short press the key **P** to exit color selection.
- 4) Press **MODE+** to switch the selected colors' Jumping, smooth and strobe (brightness/speed adjustment).
- 5) OK, completed scene editing, press **P** to play the scene.

Tables of Changing Mode:

No.	Color Press   Button to Switch color	Press  button to switch the 3 types		
		Jumping	Smooth	Strobe
1	Black			
2	Red	Static Red	Red fade out and fade in	Red strobe
3	Green	Static Green	Green fade out and fade in	Green strobe
4	Blue	Static Blue	Blue fade out and fade in	Blue strobe
5	Yellow	Static Yellow	Yellow fade out and fade in	Yellow strobe
6	Purple	Static Purple	Purple fade out and fade in	Purple strobe
7	Cyan	Static Cyan	Cyan fade out and fade in	Cyan strobe
8	White	Static White	White fade out and fade in	White strobe
9	Red, Green, Blue	RGB Jumping	RGB color smooth	RGB strobe
10	Red, Green, Blue, Yellow, Purple, Cyan, White	7 Colors Jumping	Full-color smooth	7 colors strobe


Wiring Diagram:

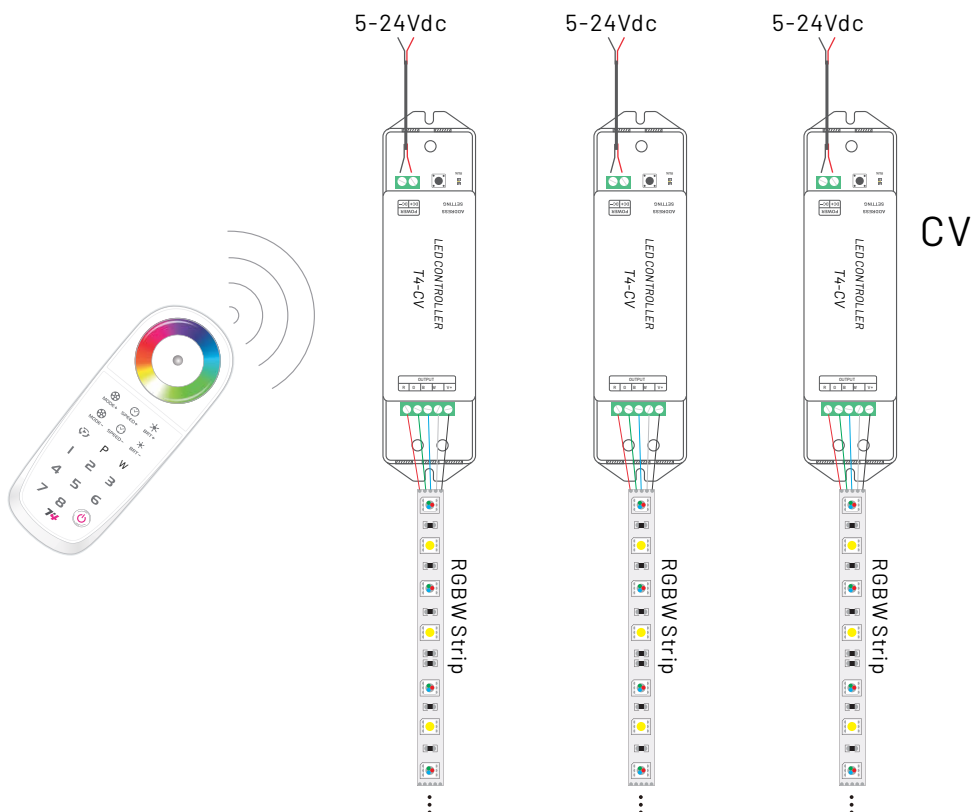

Other Special Functions:

A. Reset Function:

Feature: Reset function is available when remote operates abnormally.

Operation: Long press the 2 keys **8**  simultaneously, release after 3 seconds, the remote will auto off, undo for more than 1 minute, means reset completed. and then could restart the remote.




B. Check and Edit the Frequency Point on the Remote:

Feature: a. Revising the frequency point to eliminate the external disturbance. 12 revisable frequency points for user.

b. Multiple remotes sync-control becomes available when they use the same frequency point.


 

Attn: After reset or revised the frequency points in the remote, receivers only can be used after relearn the ID.

Check the Frequency Point on the Remote:

Turn on the remote, long press the "on/off" key  for 5 seconds until the red light  flashes 3 times, and then the green light  flashes, the numbers of the green flash will be the frequency point of the remote. you can only edit the frequency point after 3 seconds.

Edit the Frequency Point on the Remote: In frequency changing state,

Method 1: Short press any key from "1-8", the frequency point will be "1-8" correspondingly, the green light will flash in the same numbers. Then press any key or touch the color circle to exit the frequency edit state.

Method 2: Long press "on/off" key  over 5 seconds, the green light  flashes, the flash times plus 1 means the frequency point accumulate 1. In short, long press the "on/off" key  over 5 seconds each time, the frequency point will accumulate 1, which will again become value 1 when added to 12, and that cycle repeats.

Attention:

- A. The product shall be installed and serviced by the qualified person.
- B. This product is non-waterproof. Please avoid the sun and rain. When installed outdoors please ensure it is mounted in a water proof enclosure.
- C. Good heat dissipation will prolong the working life of the controller. Please ensure good ventilation.
- D. Please check if the output voltage of the LED power supply used comply with the working voltage of the product.
- E. Please ensure that adequate sized cable is used from the controller to the LED lights to carry the current. Please also ensure that the cable is secured tightly in the connector.
- F. Ensure all wire connections and polarities are correct before applying power to avoid any damages to the LED lights.
- G. If a fault occurs, please return the product to your supplier. Do not attempt to fix this product by yourself.

11. Warranty Agreement:

A. We provide lifelong technical assistance with this product:

- A 5-year warranty is given from the date of purchase. The warranty is for free repair or replacement if cover manufacturing faults only.
- For faults beyond the 5-year warranty, we reserve the right to charge for time and parts.

B. Warranty exclusions below:

- Any man-made damages caused from improper operation, or connecting to excess voltage and overloading.
- The product appears to have excessive physical damage.
- Damage due to natural disasters and force majeure.
- Warranty label, fragile label and unique barcode label have been damaged.
- The product has been replaced by a brand new product.

C. Repair or replacement as provided under this warranty is the exclusive remedy to the customer. We shall not be liable for any incidental or consequential damages for breach of any stipulation in this warranty.

D. Any amendment or adjustment to this warranty must be approved in writing by our company only.

★ This manual only applies to this model. We reserve the right to make changes without prior notice.